

# **Feller®**

User's Manual

## **Citrus Squeezer**



CS 900

# **Citrus Squeezer**

**PARTS NAME**

1. LID
2. SIEVE HOLDER
3. SIEVE
4. JAR
5. SPOUT
6. MOTOR UNIT
7. CONE
8. CONE COVER



**IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions before using.

1. To protect against electrical shock, do not immerse cord, plug, or citrus juicer in water or other liquid.
2. Close supervision is necessary when any appliance is used by or near children.
3. Unplug from outlet when no in use, before putting on or taking off parts and before cleaning. Remove plug by gripping plug body and pull out of the outlet. Never yank or twist cord to unplug.
4. Avoid contacting moving parts.
5. Do not operate this appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner, return the citrus juicer to the retail location where it was purchased for examination, repair, or adjustment.
6. Use this appliance only for its intended use as described by this manual. Do not use accessory attachments without recommending by the Electronics.
7. Do not use outdoors or operate where oxygen is not being administered or in the presence of explosive and/or flammable fumes.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces.

9. This appliance is intended for household use ONLY; it is not for commercial or industrial use.
10. Any service of the citrus juicer should be performed by the retail location where it was purchased.
11. To disconnect citrus juicer, wait until motor stops, then remove plug from electrical outlet.
12. Do not operate unattended. Make sure the motor stops completely before disassembling. Unplug after each use.

## **SAVE THESE INSTRUCTIONS**

### **Preparing the Citrus Juicer for Use**

Always clean cone, sieve, sieve holder and spout before you use the appliance for the first time (see 'Cleaning').

### **How to use your appliance (FIG .1)**

1. Place the appliance on a firm, level surface out of the reach of children.
2. Plug in.
  1. Put the Sieve holder on place correctly.
  2. Put on the sieve.
  3. Then insert the cone.
4. Switch the appliance on by pressing the halved fruit firmly onto the cone. The juice will be extracted quietly and quickly.
5. Put a vessel under spout. Flip the spout down towards the glass.
 

The instant flow system guides juice directly into vessel.
6. After you have finished, flip the spout up to prevent dripping and spilling juice.
7. Always clean the appliance immediately after use (see in 'Cleaning')
8. Cord and cone storage under Citrus Juicer base, place the cone into the hole then cover it, and exit cord through the opening at the back of the appliance.

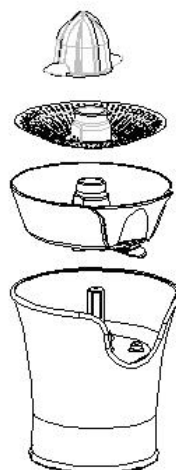



Fig. 1

### **Clean**

1. Unplug cord from electrical outlet. Remove the cone, sieve and sieve holder from the appliance.
2. Flip the spout down fully in order to clean it properly. The spout cannot be detached from the appliance.
3. Clean the cone, sieve and sieve holder by using warm soapy water. Dry all parts. Do not clean these parts in a dishwasher.
4. Clean the motor unit by using a moist cloth Never immerse the motor unit in water or rinse it under the tap.

- ۹- این دستگاه صرفاً برای استفاده در منزل طراحی شده است و برای استفاده تجاری یا صنعتی مناسب نیست.
- ۱۰- برای هرگونه تعمیر، دستگاه آب مرکبات‌گیری را به مرکز خدمات پس از فروش تحویل دهید.
- ۱۱- برای قطع جریان برق دستگاه، صبر کنید تا موتور دستگاه متوقف شود، سپس دوشاخه را از پریز بکشید.
- ۱۲- دستگاه را به حال خود رها نکنید؛ پیش از جداکردن قطعات، مطمئن شوید که موتور دستگاه متوقف شده است. پس از هربار استفاده، دوشاخه را از برق بکشید.

این دستورالعمل‌ها را نزد خود نگه دارید.

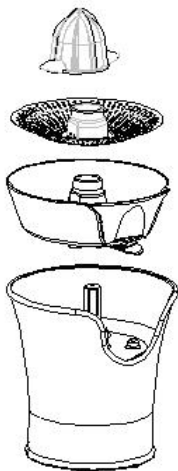

شکل ۱

## راه‌اندازی دستگاه آب مرکبات‌گیری

هنگام استفاده برای نخستین بار، سری مخروطی شکل، نگه‌دارنده صافی، صافی و دهانه خروجی آب میوه را کاملاً تمیز کنید (بخش تمیزکاری را ببینید).

## روش استفاده از دستگاه (شکل ۱)

۱- دستگاه را بر روی سطح صاف و پایداری قرار دهید؛ به طوری که از دسترس کودکان به دور باشد.

۲- دوشاخه را به برق بزنید.

۳- نگه‌دارنده صافی را در جایبش به درستی قرار دهید.

۴- صافی را در جایبش قرار دهید.

۵- سپس سری مخروطی شکل را وارد کنید.

۶- دستگاه را روشن کنید و نصف میوه درسته را بر روی سری مخروطی شکل فشار دهید. آب میوه به طور کامل و به سرعت گرفته می‌شود.

۷- ظرفی در زیر دهانه خروجی آب میوه قرار دهید. دهانه را به سمت لیوان رو به پایین بچرخانید. سیستم جریان ثابت، آب میوه را مستقیماً به درون ظرف هدایت می‌کند.

۸- پس از پایان کار، دهانه را به سمت بالا بچرخانید تا از چکیدن یا پاشیدن آب میوه پیش‌گیری شود.

۹- بلافاصله پس از استفاده، دستگاه را تمیز کنید.

۱۰- محفظه نگه‌داری سیم و سری مخروطی شکل در زیر دستگاه است؛ سری مخروطی شکل را در سوراخ قرار دهید و درپوش آن را بگذارید و سیم برق را از منفذ پشت دستگاه خارج کنید.

## تمیزکاری


۱- دوشاخه را از برق بکشید. سری مخروطی شکل، صافی و نگه‌دارنده صافی را از دستگاه جدا کنید.

۲- دهانه را به طور کامل به سمت پایین بچرخانید تا کاملاً تمیز شود. دهانه خروجی را نمی‌توان از دستگاه جدا کرد.

۳- آب با گرم و مایعی شوینده، سری مخروطی شکل، صافی و نگه‌دارنده صافی را تمیز کنید. تمامی قطعات را خشک نمایید. این اجزا را در ماشین ظرف‌شویی نشویید.

محفظه موتور را با پارچه‌ای نرم‌دار تمیز کنید. هیچ‌گاه دستگاه را در آب فرو نبرید و زیر شیر آب نگیرید.

## توصیف اجزا

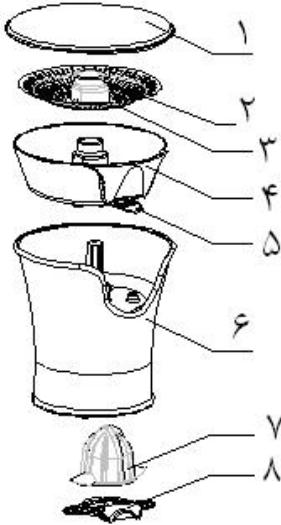

- ۱- درپوش
- ۲- نگه‌دارنده صافی
- ۳- صافی
- ۴- ظرف
- ۵- دهانه خروجی
- ۶- محفظه موتور
- ۷- سری مخروطی شکل
- ۸- درپوش سری مخروطی شکل

## هشدارهای مهم ایمنی

هنگام استفاده از وسایل برقی، هشدارهای ایمنی اولیه زیر را می‌باید در نظر داشت:

پیش از استفاده از دستگاه، تمامی دستورالعمل‌ها را بخوانید.

۱- برای پیش‌گیری از برق‌گرفتگی، از فرو بردن سیم برق، دوشاخه یا دستگاه در آب یا هرگونه مایع دیگر بپرهیزید.

۲- هنگام استفاده کودکان از دستگاه یا استفاده در حضور آنان، نظارت دقیق شما ضروری است.

۳- هنگامی که از دستگاه استفاده نمی‌کنید، پیش از سرهم‌بندی یا جداکردن قطعات، و پیش از تمیزکاری، دوشاخه را از برق بکشید. برای قطع برق دستگاه، دوشاخه را بگیرید و از برق بکشید؛ هیچ‌گاه بدنه سیم را با دست نکشید.

۴- از تماس با اجزای متحرک دستگاه بپرهیزید.

۵- این دستگاه را با سیم برق یا دوشاخه آسیب‌دیده یا در صورت نقص عملکرد آن یا هرگونه آسیبی به کار نیندازید. دستگاه را به مراکز خدمات پس از فروش تحویل دهید تا آزمایش، تعمیر یا تنظیم شود.

۶- از این دستگاه تنها در مواردی استفاده کنید که برای آن در نظر گرفته شده است. از لوازم جانبی‌ای که سازنده پیشنهاد نکرده باشد، استفاده نکنید.

۷- از دستگاه در بیرون از منزل استفاده نکنید. دستگاه را در جایی که هوا جریان ندارد یا در مجاورت گازهای قابل انفجار یا اشتعال‌زا قرار ندهید.

۸- نگذارید سیم برق از لبه میز یا پیشخوان آویزان شود، یا با سطوح داغ تماس پیدا کند.

# Feller®

دفترچه راهنمای

گیری  
آب مرکبات



CS 900

## Citrus Squeezer