

Germany
Feller




SL 90

**Slow
Cooker**

Before operating this unit, Please read the instruction manual carefully.
This product is for household use only.

PRODUCT PARTS DESCRIPTION

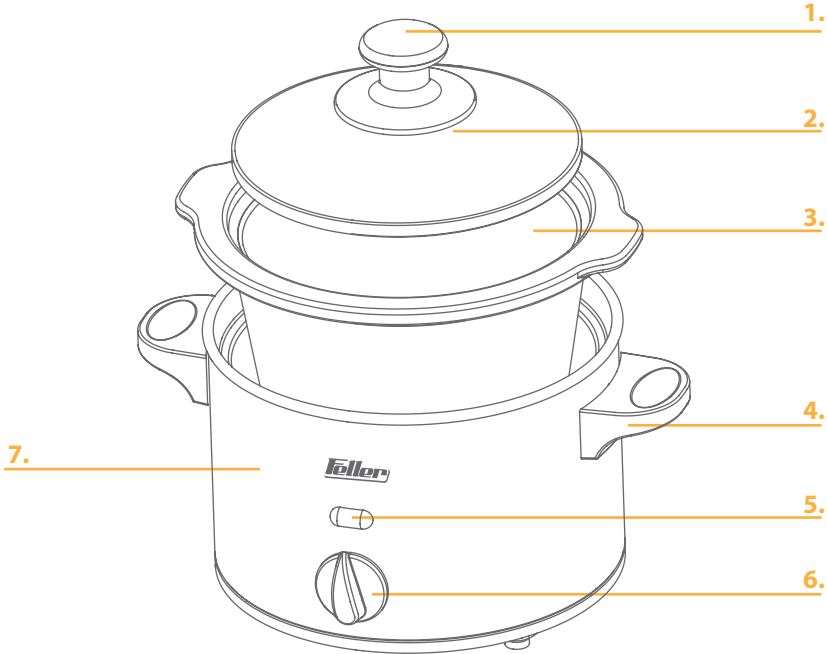

- | | |
|--------------|--------------------|
| 1. Knob | 5. Indicator Light |
| 2. Glass Lid | 6. Switch |
| 3. Inner Pot | 7. Cooking Body |
| 4. Handle | |

TECHNICAL DATA

Power Supply:..... 220-240 W/50-60 Hz
 Rated Power: 75~90 W
 Capacity:..... 2 Qt
 Net Weight: 2.13 Kg
 Dimension: 100.6 x 81.9 x 85.5 inch

IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs. Use potholders when removing cover or handling hot containers.
3. To protect against electrical shock, do not immerse cord, plug or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to after sale service centre of Feller for examination, repair or adjustment.
7. The use of accessory attachments not recommended by Feller company may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot food, water or other hot liquids.
12. Do not use the appliance for other than intended use.
13. Lift and open cover carefully to avoid scalding, and allow water to drip into unit.
14. To disconnect, turn the control to OFF, then remove plug from wall outlet.
15. Containers are designed for use with this appliance only. They must never be used on a range top. Do not set a hot container on a wet or cold surface. Do not use a cracked container.

OPERATION INSTRUCTIONS

1. Wipe the exterior of the inner pot and then install it into the cooking body. Rotate the inner pot slightly to ensure it sits properly
2. Turn the switch to the "OFF".
3. Put the food into the inner pot, and add water according to the food quantity, then close with the glass lid.
4. Plug in the wall outlet.
5. There are 4 operation settings.


Off: Power off

Low

High

Warm: Keep warm

You can choose the "Low" or "High" settings according to the desired cooking time.

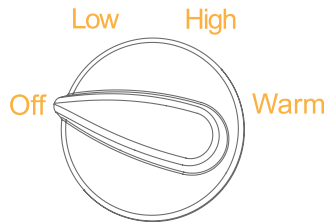

6. When the cooking time is completed, turn the knob to the "warm" position if you want to continue warming the food.



NOTE: We don't recommend using the "Warm" setting for more than four hours.

7. When the food is ready to serve, first please turn the knob to the "Off". Unplug from the wall outlet.



SAFETY INSTRUCTIONS

1. Always keep the Slow Cooker unplugged when it is not in use or without inner pot or the inner pot is empty.
2. Do not place the Slow Cooker in any place that is unstable, humid, near fire or any heat sources to prevent any accident or malfunctions.
3. To protect against electric shock, do not immerse the cooking body in water or any liquid. Do not pour any liquid into cooking body without inner pot in it.
4. If the supply cord is damaged, it must be replaced by after sale service centre of Feller in order to avoid a hazard.
5. Always cook with the lid on, for the recommended time.



NOTE: A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

6. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
7. If a Longer detachable power-supply cord or extension cord is used.
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

CARE AND MAINTENANCE

- The removable inner pot goes safely into the dishwasher, or may be washed in hot soapy water. Do not use abrasive cleaning compounds a cloth, a sponge or rubber spatula usually will be enough to remove the residual. To remove water spots and other stains, use a non- abrasive cleaner or vinegar.
- Wipe the cooking body with a soft cloth. Do not use abrasive cleaners.



- As with any fine ceramic, the stoneware bowl will not withstand the shock of sudden temperature changes.
- If the stoneware has been preheated or is hot, do not put it in cold foods. Do not preheat the Slow Cooker before using . The stoneware should be at room temperature before adding hot foods.
- To wash your stoneware right after cooking, use hot water. Do not pour in cold water if the stoneware is hot.

Lined area for taking notes, consisting of multiple horizontal dotted lines.

توجه: سیم برق کوتاهی، به منظور کاهش خطر ناشی از در هم پیچیدن یا لغزش سیم بلندتر، به کار گرفته شده است.



۶. سیم‌های بلندتر برق که قابل جدا شدن یا جمع شدن هستند، در دسترس می باشند و چنانچه در به کارگیری آن‌ها احتیاط گردد، می‌توانند استفاده گردند.
۷. چنانچه سیم برق بلندتر یا جمع‌شونده استفاده می‌گردد:
 - ۱) درجه‌ی الکتریکی روی سیم بایستی حداقل به اندازه‌ی مناسب با دستگاه باشد.
 - ۲) سیم برق بایستی مرتب گردد تا در سطح میز یا پیشخوان پخش نگردد. زیرا ممکن است ندانسته، توسط کودکان کشیده شود.

مراقبت و نگهداری


- قابلمه‌ی داخلی که قابل جابجایی است، می‌تواند درون ماشین ظرف‌شویی یا با آب گرم و مایع ظرف‌شویی شسته شود. از لوازم ساییده برای شست‌وشو استفاده نکنید؛ یک تکه پارچه، قطعه‌ای اسفنج یا یک کفگیر لاستیکی برای تمیز کردن پس ماندها کفایت می‌کند. برای برطرف کردن لکه‌های آب و سایر آلودگی‌ها از سرکه یا شوینده‌ی غیرساینده استفاده نمایید.
- بدنه‌ی دستگاه را با پارچه‌ای نرم تمیز نمایید. از شوینده‌های ساینده استفاده نکنید.



- کاسه‌ی سرامیکی همانند هر گونه سرامیک مرغوب، قادر به تحمل تغییرات ناگهانی دما نیست.
- چنانچه کاسه‌ی سرامیکی از پیش گرم شده یا داغ است، غذاهای سرد را درون آن قرار ندهید. قبل از استفاده، آرام‌پز را گرم نکنید. ظرف سرامیکی بایستی قبل از اضافه کردن غذاهای داغ، با هوای اتاق هم دما باشد.
- برای شستن ظرف سرامیکی، بلافاصله پس از طبخ غذا، از آب گرم استفاده نمایید و چنانچه داغ است، آب سرد درون آن نریزید.

دستور العمل‌های استفاده

۱. بدنه‌ی قابلمه‌ی داخلی را تمیز نموده و آن را درون دستگاه نصب نمایید. قابلمه را به آرامی بچرخانید تا مطمئن شوید که در محل خود قرار گرفته است.
۲. سوئیچ را در حالت «OFF» (خاموش) قرار دهید.
۳. غذا را درون قابلمه داخلی گذاشته و بر حسب مقدار غذا، به آن آب اضافه نمایید؛ سپس، درپوش شیشه‌ای را ببندید.

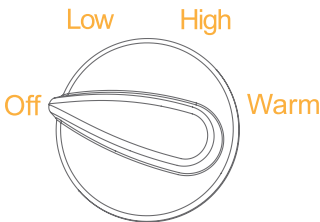

۴. دوشاخه را به پریز برق متصل نمایید.
۵. چهار وضعیت تنظیم عملیات موجود است:
قطع برق: Off
کم: Low
زیاد: High
گرم نگه داشتن غذا: Keep Warm
شما می‌توانید بر اساس مدت زمان لازم برای طبخ غذا، وضعیت‌های «Low» یا «High» را انتخاب نمایید.

۶. زمانی که مدت زمان پخت به اتمام رسید، چنانچه می‌خواهید به گرم کردن غذا ادامه دهید، وضعیت «Warm» (گرم نگه داشتن) را انتخاب کنید.

توجه: ما استفاده از وضعیت «Warm» را به مدت بیش از ۴ ساعت توصیه نمی‌کنیم.



۷. زمانی که غذا آماده‌ی سرو کردن است، لطفاً ابتدا وضعیت «Off» را انتخاب و سپس دوشاخه را از پریز برق جدا نمایید.

دستور العمل‌های ایمنی


۱. همواره در زمان عدم استفاده از آرام‌پز، یا بدون قابلمه‌ی داخلی یا خالی بودن قابلمه، دستگاه را از پریز برق جدا نمایید.
۲. آرام‌پز را در مکان‌های ناپایدار، مرطوب، نزدیک به آتش یا هر منبع گرمایی قرار ندهید تا از هر گونه حادثه یا کارکرد نامناسب پیش‌گیری گردد.
۳. برای محافظت کردن از خطر برق‌گرفتگی، بدنه‌ی دستگاه را داخل آب یا هر مایع دیگری فرو نبرید. زمانی که قابلمه‌ی داخلی در بدنه قرار ندارد، هیچ گونه مایعی را درون بدنه نریزید.
۴. چنانچه سیم برق آسیب دیده، باید توسط مرکز خدمات پس‌از فروش فلر تعویض گردد تا از بروز خطر جلوگیری به عمل آید.
۵. همواره در مدت زمان پیشنهاد شده، با درپوش بسته اقدام به طبخ نمایید.

در زمان استفاده از دستگاه‌های الکتریکی، خصوصاً در حضور کودکان، همواره بایستی اقدامات ایمنی پیش‌گیرانه به منظور کاهش خطر آتش‌سوزی، برق‌گرفتگی و یا آسیب دیدن افراد، به شرح زیر اجرا گردد:

۱. تمام دستورالعمل‌ها را بخوانید.
۲. سطوح داغ را لمس نکنید و از دستگیره‌ها استفاده نمایید. در زمان برداشتن پوشش یا جابه‌جا کردن ظروف داغ از دستکش و پارچه‌های مخصوص آشپزی استفاده نمایید.
۳. به منظور جلوگیری از برق‌گرفتگی، سیم برق، دوشاخه یا خود دستگاه را در آب یا مایع دیگری فرو نبرید.
۴. در زمان به‌کار بردن هر گونه دستگاه توسط کودکان یا در نزدیکی آن‌ها، نظارت مستقیم امری ضروری است.
۵. پیش از تمیزکاری یا در موقع عدم استفاده از دستگاه، دوشاخه را از برق جدا نمایید. قبل از تمیزکاری، اجازه دهید دستگاه خنک گردد.
۶. هیچ دستگاهی را با سیم برق یا دوشاخه‌ی آسیب‌دیده، پس از عدم کارکرد مناسب و یا هر گونه خرابی به کار نگیرید. دستگاه را برای بررسی، تعمیر یا تنظیم به نزدیک‌ترین مرکز خدمات پس‌ازفروش فلر ارجاع دهید.
۷. استفاده از لوازمی که توسط سازنده‌ی دستگاه پیشنهاد نشده، ممکن است باعث خسارت گردد.
۸. از این دستگاه در فضای باز استفاده نکنید.
۹. سیم برق را در تماس با سطوح داغ، یا به صورت آویزان از لبه‌ی میز یا پیشخوان قرار ندهید.
۱۰. دستگاه را در برابر یا نزدیکی گازهای قابل اشتعال، اجاق گاز الکتریکی یا درون اجاق گرم قرار ندهید.
۱۱. در زمان جابه‌جا نمودن دستگاه که حاوی غذا، آب یا هر مایع داغ دیگری است، باید بسیار دقت نمود.
۱۲. از دستگاه برای سایر مواردی که مورد نظر نیست، استفاده نفرمایید.
۱۳. پوشش را با احتیاط برداشته و باز نمایید تا باعث سوختگی پوست نگردد و اجازه دهید تا قطره‌های آب به درون دستگاه بچکند.
۱۴. برای خاموش نمودن دستگاه، ابتدا دکمه‌ی کنترل را به وضعیت «OFF» (خاموش) درآوردید و سپس دوشاخه را از پریز برق جدا نمایید.
۱۵. مخزن‌ها فقط برای استفاده در این دستگاه طراحی شده‌اند. آن‌ها هرگز نباید روی اجاق گاز مورد استفاده قرار گیرند. مخزن داغ را روی سطح نمناک یا سرد قرار ندهید و از مخزن شکسته استفاده نکنید.

پیش از استفاده، لطفاً دفترچه‌ی راهنما را به دقت بخوانید.
این دستگاه فقط برای استفاده‌ی خانگی می‌باشد.

توضیح اجزای دستگاه

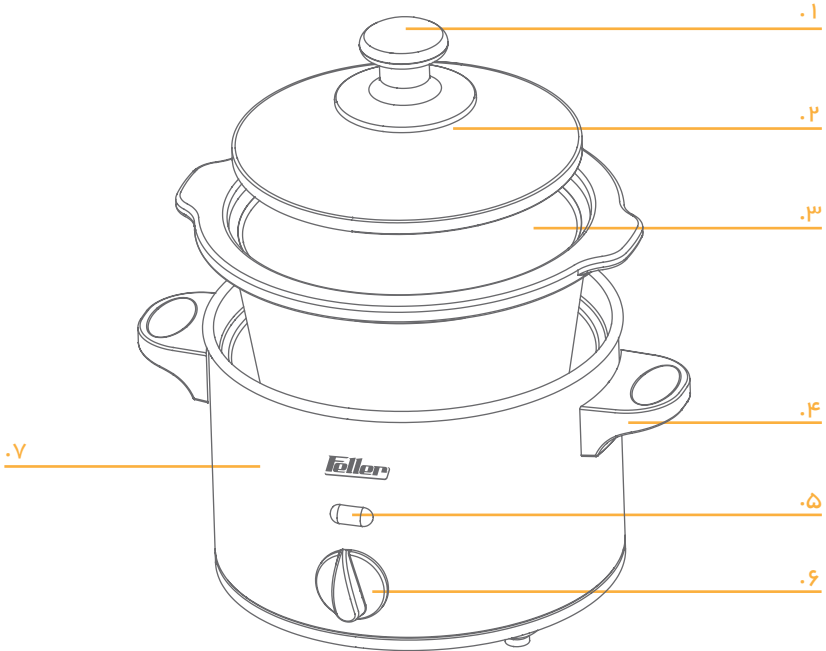

- | | |
|--------------------------------------|------------------------|
| ۱. دستگیره‌ی بلند کردن درپوش شیشه‌ای | ۵. چراغ نمایشگر |
| ۲. درب شیشه‌ای | ۶. سوئیچ |
| ۳. قابلمه‌ی داخلی | ۷. بدنه‌ی محافظه‌ی پخت |
| ۴. دستگیره‌ی جانبی | |

جدول داده‌های فنی

ولتاژ/فرکانس: ۲۲۰-۲۴۰ ولت/۵۰-۶۰ هرتز
توان: ۷۵-۹۰ وات
گنجایش: حدود ۲ لیتر
وزن: ۲/۱۳ کیلوگرم
ابعاد: ۲۲۵/۵×۲۰۸×۲۱۷/۲ سانتی‌متر

Germany
Feller



SL 90



آرام پیز