

Feller Germany



SL 120 D

**Slow
Cooker**

When using electrical appliance. Basic safety precautions should always be followed including the following:

Household use only

IMPORTANT SAFEGUARDS



1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs. Use potholders when removing cover or handling hot containers.
3. To protect against electrical shock, do not immerse cord, plug or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before Cleaning.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner .Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance Manufacturer may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place no or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hat food, Water or other hot liquids.
12. Do not use the appliance for other than intended use.
13. Lift and open cover carefully to avoid scalding, and allow water to drip into unit.
14. To disconnect, turn the control to OFF, then remove plug from wall outlet.
15. Containers are designed for use with this appliance only. They must never be used on a range top .Do not set a hot container on a wet or cold surface. Do not use a cracked container.
16. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience

and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.


17. Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS

SPECIFICATION

Model	Voltage	Capacity	Power
SL 120 D	220-240V~ 50Hz	5.0L	156-170W

NAMES OF PARTS

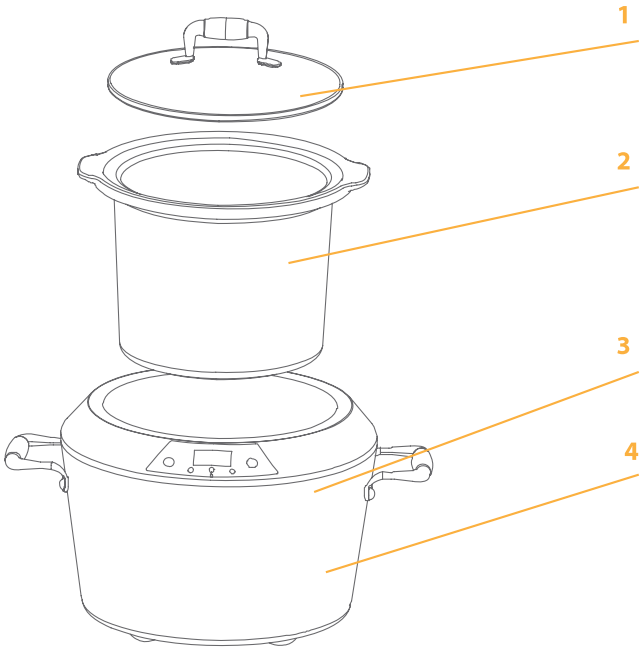

1. Lid


2. Inner pot

3. Control box

4. Cooking body

OPERATION

1. Wipe the exterior of the inner pot and then install it into the cooking body. Rotate the inner pot slightly to ensure it sits properly.
2. Push the knob to the "off"
3. put the food into the inner pot, and add water according to the food quantity, then close with the glass lid.
4. plug in the wall outlet.
5. There are 4 operation settings.

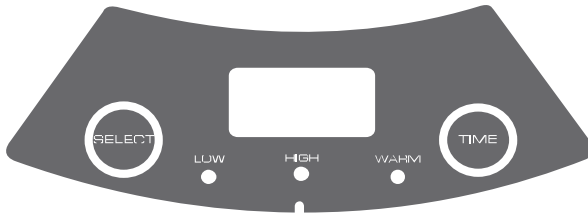

You can choose the "low" or "High" settings according to the desired cooking time.

6. When the cooking time is completed, push the knob to the "warm" position If you want to continue warming the food.

NOTE: We don't recommend using the "Warm" setting for more than 4 hours.



7. When the food is ready to serve, first please push the knob to the "off". Unplug from the wall outlet.

SAFETY INSTRUCTIONS

1. Always keep the Slow Cooker unplugged when it is not in use or without inner Pot or the inner pot is empty.
2. Do not place the Slow Cooker in any place that is unstable, humid, near Fire or any heat sources to prevent any accident or malfunctions.
3. To protect against electric shock, do not immerse the cooking body in water or any liquid. DO not pour any liquid into cooking body without inner pot in it.
4. If the supply cord is damaged, it must be replaced by the manufacturer or its

service agent or a similarly qualified person in order to avoid a hazard.

5. Always cook with the lid on, the recommended time.

6. A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

7. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

8. If a Longer detachable power-supply cord or extension cord is used.

1) The marked electrical rating of the cord set or extension cord should
Be at least as great as the electrical rating of the appliance.

2) The cord should be arranged so that it will not drape over the countertop
Or tabletop where it can be pulled on by children or tripped over unintentionally.

CARE AND MAINTENANCE

- The removable inner pot goes safely into the dishwasher, or may be washed in hot soapy water. Do not use abrasive cleaning compounds - a cloth, a sponge or rubber spatula usually will be enough to remove the residual. To remove water spots and other stains, use a nonabrasive cleaner or vinegar.

- Wipe the cooking body with a soft cloth. Do not use abrasive cleaners.

- As with any fine ceramic, the stoneware bowl will not withstand the



shock of sudden temperature changes.

If the stoneware has been preheated or is hot, do not put it in cold foods. Do not preheat the Slow Cooker before using unless specified in the recipe. The stoneware should be at room temperature before adding hot foods.

- To wash your stoneware right after cooking, use hot water. Do not pour in cold water if the stoneware is hot.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

استفاده شود.

۷. سیم های برق جداشدنی بلندتر موجود و سیم سیار را می توان با دقت و احتیاط مورد استفاده قرار داد.


۸. اگر از یک سیم برق جدا شدنی بلندتر استفاده می شود:

۱) میزان ولتاژ سیم سیار و سیم برق می باید با ولتاژ دستگاه یکسان باشد.

۲) سیم باید طوری قرار گیرد که کودکان به آن دسترسی نداشته باشند و به دست و پا گیر نکند.

نگهداری و مراقبت

- دیگ داخلی جدا شدنی را می توان در ماشین ظرف شویی یا آب داغ و مایعی شوینده شست. از پاک کننده های خورنده سطوح استفاده نکنید.
- یک پارچه، اسفنج یا کاردک لاستیکی جهت پاک کردن کافی است. جهت پاک کردن آب و سایر لکه ها، از پاک کننده ای غیر سایا یا سرکه استفاده کنید.
- بدنه آرام پز را با یک پارچه نرم پاک کنید، از پاک کننده های سایا استفاده نکنید.
- مانند هر نوع سرامیک ظریف، کاسه سنگی در مقابل تغییرات ناگهانی دما مقاومت نخواهد کرد.

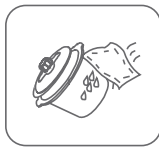

- اگر ظروف سنگی از پیش گرم شده و یا داغ اند، غذای سرد را در آن نریزید. قبل از استفاده آرام پز را گرم نکنید مگر اینکه در دستور آشپزی اینچنین قید شده باشد.
- ظرف سرامیکی قبل از افزودن غذای داغ باید تحت دمای اتاق باشد.
- برای شستن ظرف سرامیکی سریعاً بعد از پخت، از آب داغ استفاده کنید. اگر ظروف داغ اند، آب سرد درون آن ها نریزید.


دوراندختن دستگاه مطابق با اصول زیست محیطی



شما می توانید به حفاظت از محیط زیست کمک کنید! لطفاً به مقررات محلی توجه کنید. وسایل برقی دوراندختنی را به مراکز ویژه جمع آوری این دستگاه ها تحویل دهید.

دستور العمل های استفاده

۱. قسمت بیرونی قابلمه ی داخلی را شسته و سپس آن را درون بدنه ی دستگاه نصب کنید. قابلمه را به آرامی بچرخانید تا مطمئن شوید به درستی در محل خود قرار گرفته است.
۲. دستگاه را در وضعیت «خاموش» قرار دهید.
۳. مواد غذایی را درون قابلمه ی داخلی ریخته و برحسب مقدار مواد غذایی، آب اضافه کنید. سپس در شیشه ای را ببندید.
۴. دوشاخه را به پریز برق متصل کنید.
۵. وضعیت تنظیم موجود است: ۴ و ۵
مطابق با زمان مورد نظر پخت، باید تنظیمات Low یا High را انتخاب کنید.

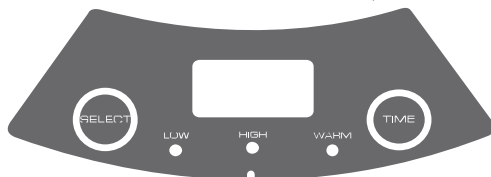

۶. با خاتمه یافتن زمان پخت، چنانچه می خواهید به گرم نگهداشتن مواد غذایی ادامه دهید، دکمه ی «Warm» را فشار دهید.



توجه: ما استفاده از حالت «گرم نگهداشتن» را بیش از ۴ ساعت، پیشنهاد نمی کنیم.

۷. وقتی غذا آماده سرو است، دستگاه را خاموش کنید، دوشاخه را از پریز بشکید.

دستورات ایمنی

۱. همیشه وقتی از آرام پز استفاده نمی کنید یا بدون قابلمه است و یا قابلمه خالی است، دوشاخه را از برق بکشید.
۲. آرام پز را در مکان های ناپایدار، مرطوب، نزدیک به آتش یا منابع گرما قرار ندهید تا دچار حادثه یا نقص فنی نشود.
۳. جهت حفاظت در مقابل برق گرفتگی، بدنه آرام پز را در آب یا مایع دیگری قرار ندهید. هیچ وقت مایعی را بدون اینکه قابلمه در دستگاه باشد، در بدنه آرام پز نریزید.
۴. اگر سیم برق خراب شود، تولید کننده یا خدمات پس از فروش آن یا فرد واجد شرایطی باید آن را عوض کند تا از بروز خطر جلوگیری شود.
۵. همیشه زمانی که درپوش بسته است، از دستگاه استفاده کنید.
۶. یک سیم برق کوتاه باید جهت کاهش خطر گیر کردن سیم به دست و پا روی آن


۱۷. این وسیله برای استفاده توسط افرادی با قابلیت های جسمانی ، حسی و ذهنی پایین یا افرادی که تجربه و دانش کافی ندارند (شامل کودکان) توصیه نمی شود مگر اینکه در رابطه با استفاده از دستگاه، فرد مسئول ایمنی برآن ها را نظارت نماید.

۱۸. باید مواظب بود کودکان با این وسیله بازی نکنند.

جدول مشخصات

مدل	ولتاژ	ظرفیت	توان
SL 120 D	۲۲۰-۲۴۰ ولت - ۵۰ هرتز	۵ لیتر	۱۷۰-۱۵۶ لیتر

اسامی قطعات

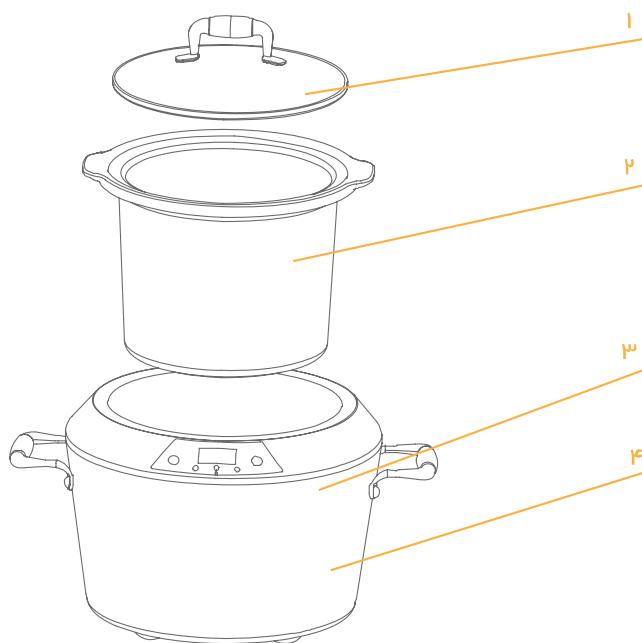

۳. صفحه کنترل
۴. بدنه ی دستگاه

۱. درپوش
۲. قابلمه ی داخلی

بیش از استفاده از وسایل برقی، هشدارهای ایمنی اولیه را می باید در نظر داشت:



هشدارهای مهم ایمنی

۱. زمان استفاده از ابزار برقی، به ویژه زمانی که کودکان نزدیک شما هستند، اقدامات احتیاطی اولیه همیشه باید دنبال شود تا خطر آتش سوزی، برق گرفتگی یا صدمه به اشخاص کاهش یابد.
۲. کلیه دستورالعمل ها را مطالعه کنید.
۳. به سطوح داغ دست نزنید، از دستگیره استفاده کنید. زمان برداشتن درپوش یا جابه جایی ظرف داغ از دستگیره قابلمه استفاده کنید
۴. جهت حفاظت در برابر برق گرفتگی، سیم، دو شاخه یا دستگاه را در آب و سایر مایعات قرار ندهید.
۵. نظارت دقیق زمانی مورد نیاز است که هر دستگاه توسط کودکان مورد استفاده قرار گیرد یا در دسترس شان باشد.
۶. زمانی که وسیله برقی مورد استفاده قرار نمی گیرد و قبل از تمیزکاری، آن را از دو شاخه بکشید. قبل از تمیز کردن، بگذارید خشک شود.
۷. وسیله برقی را باسیم یا دو شاخه معیوب روشن نکنید و در صورت نقص عملکرد دستگاه، جهت بررسی، تعمیر یا تنظیم آن را به نزدیکترین محل سرویس دهی مجاز تحویل دهید.
۸. استفاده از وسایل جانبی غیر مجاز که توسط تولید کننده توصیه نشده اند، باعث آسیب و جراحت می شود.
۹. از این دستگاه زمانی که درش باز است، استفاده نکنید.
۱۰. نگذارید سیم از لبه میز یا پیشخوان آویزان باشد و با سطح داغ تماس نداشته باشد.
۱۱. آن را در نزدیکی دستگاه گاز سوز یا برقی داغ یا اجاق گاز روشن قرار ندهید.
۱۲. هنگام جابه جا کردن دستگاه حاوی غذا، آب و سایر مایعات داغ احتیاط کنید.
۱۳. از این دستگاه به غیر از اهداف مورد نظر استفاده نکنید.
۱۴. درپوش را به دقت بردارید و باز کنید تا از سوختگی جلوگیری شود و بگذارید آب کم کم وارد دستگاه شود.
۱۵. جهت خاموش کردن، تنظیم گر را بر روی OFF بچرخانید، سپس دو شاخه را از پریز جدا کنید.
۱۶. ظروف مورد نظر فقط باید در این دستگاه استفاده شوند. از این ظروف برای اجاق گاز استفاده نکنید. ظرف داغ را روی سطح مرطوب یا سرد قرار ندهید. از ظرف ترک خورده استفاده نکنید.

Feller Germany



SL 120 D



آرام پز